

Metal Gazebo Instruction Manual



After Sales Support
Call 0871 911 7031
Email
customerservice@gardengearonline.co.uk
Product Code G4161

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from date of purchase

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.



INTRODUCTION

Congratulations

You have made an excellent choice with the purchase of this quality Garden Gear product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Garden Gear product is backed by our full 12 month manufacturers guarantee and an outstanding after sales service through our dedicated Helpline.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

We hope you enjoy using your purchase for many years to come.

 
 
 
Contents

- 2. Introduction
- 3. General information and safety warnings
- 4. Parts list
- 5. Assembly
- 10. Cleaning and maintenance
- 11. Guarantee

General information and safety warnings

- Remove all packaging and make sure that the gazebo is intact. Do not leave packaging materials like bags and staples within the reach of children and pets.
- Only use the gazebo for its intended purpose.
- Do not use any open flames inside or near the product.
- Always check for overhead electric wires, tree branches or other structures before installing the gazebo. Be aware of anything that could cause rainwater to run off onto the gazebo.
- Do not store any flammable liquids inside the shelter.
- Do not hang anything from the roof or supporting frame.
- For outdoor use only.
- Always use on a flat, level surface.
- Do not allow children to play with or climb on the gazebo.
- Do not allow water to pool in the roof as this will result in excessive weight on the roof.
- Allow to dry fully before storing.
- This gazebo is not designed to be a permeant structure.
- If adverse weather is predicted, always dismantle and store away the gazebo.
- Never used hard-edged tools (such as a shovel) to remove something from the fabric of the gazebo.
- Do not hang anything from the roof or supporting frame.
- Not suitable for commercial purposes.

Parts list


NO.	PARTS		QTY		
1			4pcs		
2			8pcs		
3			4pcs		
4			4pcs		
5			4pcs		
NO.	PARTS	QTY	NO.	PARTS	QTY
A		1pc	X4	 M6*50	8pcs
B		4pcs	D		1pc
C		4pcs	E		1pc
X1	 M6*15	4pcs	F		8pcs
X2	 M6*15	8pcs	O		1pc
X3	 M6*30	16pcs	W		4pcs

Assembly


- Unpack everything and dispose of all packaging materials.
- Lay out all the parts and ensure that you have everything as listed in the parts list.
- We recommend 4 people assemble this gazebo.

1. Connect the top metal bars (2) to the supporting corner pole (1) using screws (X1) and bracket (C). Then use screws (X4) and bolts through the centre of the metal bars into the supporting pole. Repeat this for all 4 corners.

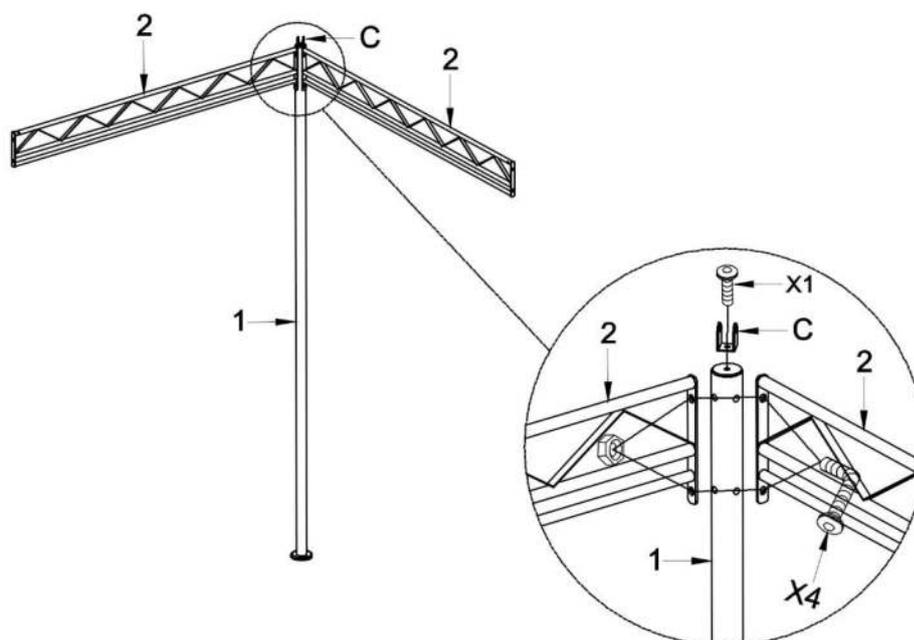STEP 1



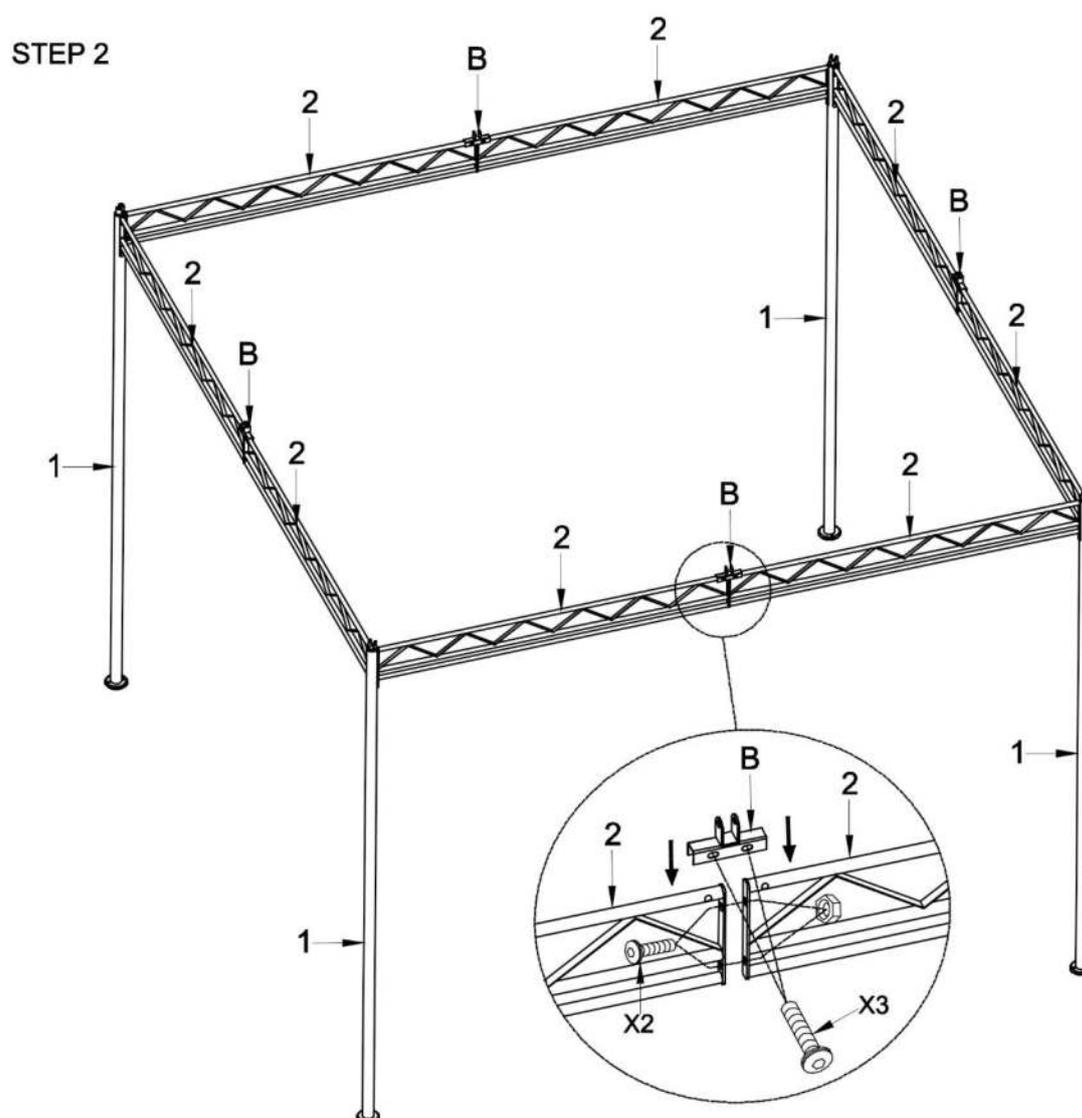
2. Once all 4 corners are built, you then need to connect the corners to each other via the metal bars (2). You do this by using brackets (B) and screws (X3). Then secure through the centre of the metal bars using screw (X2) and bolt.




3. To build the roof:

1. Connect poles 3 & 5 together to create 4 long poles.
2. Insert the 4 long poles (3 & 5 connected) into the centre piece (A).
3. Then insert the other poles (4) into the centre piece (A).

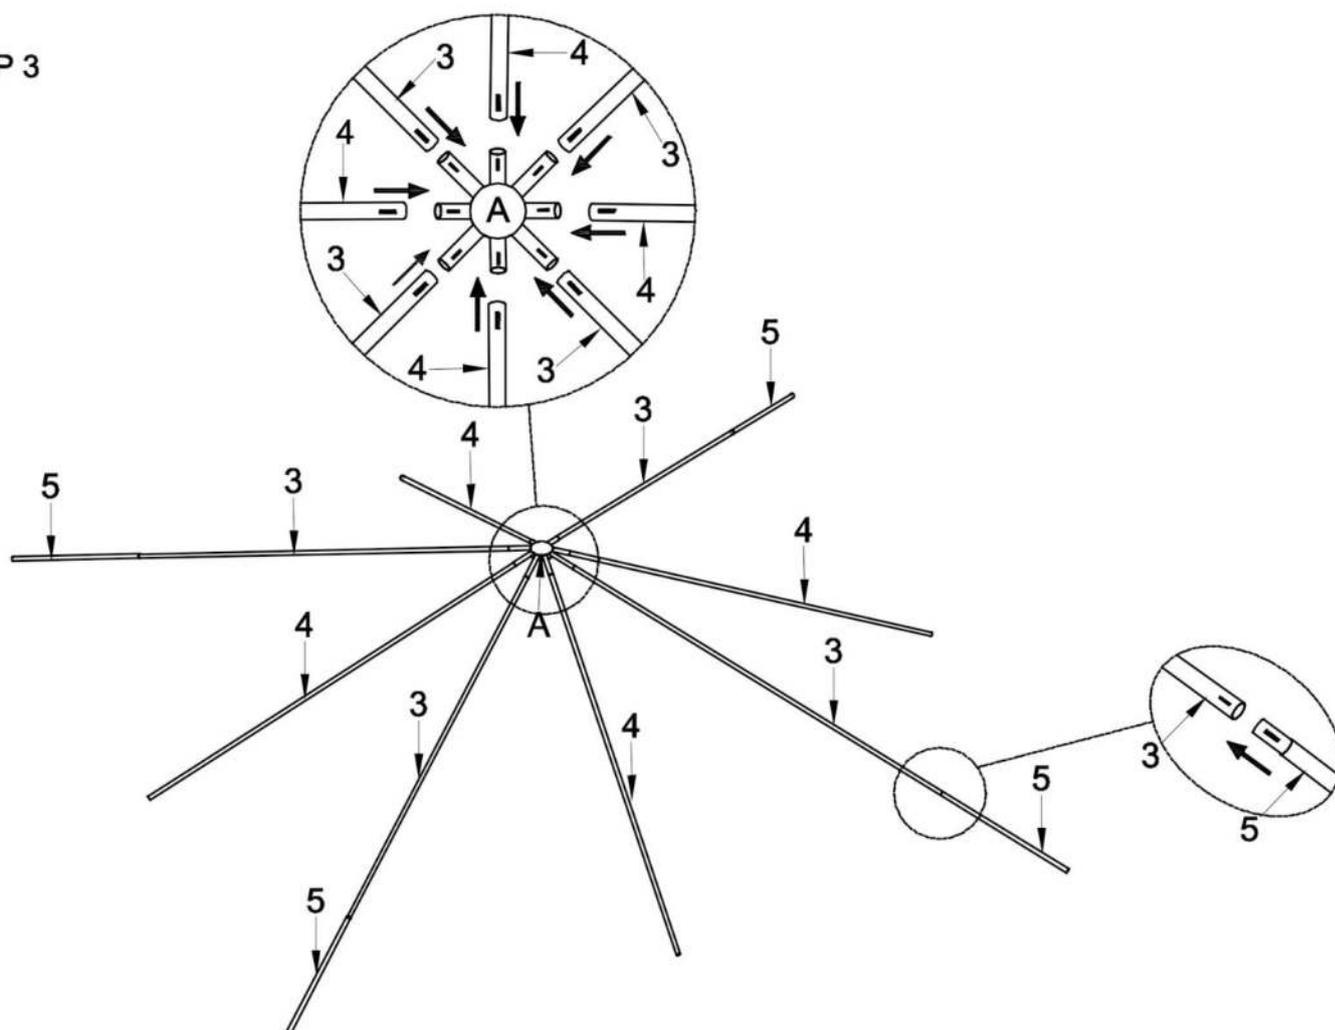
STEP 3



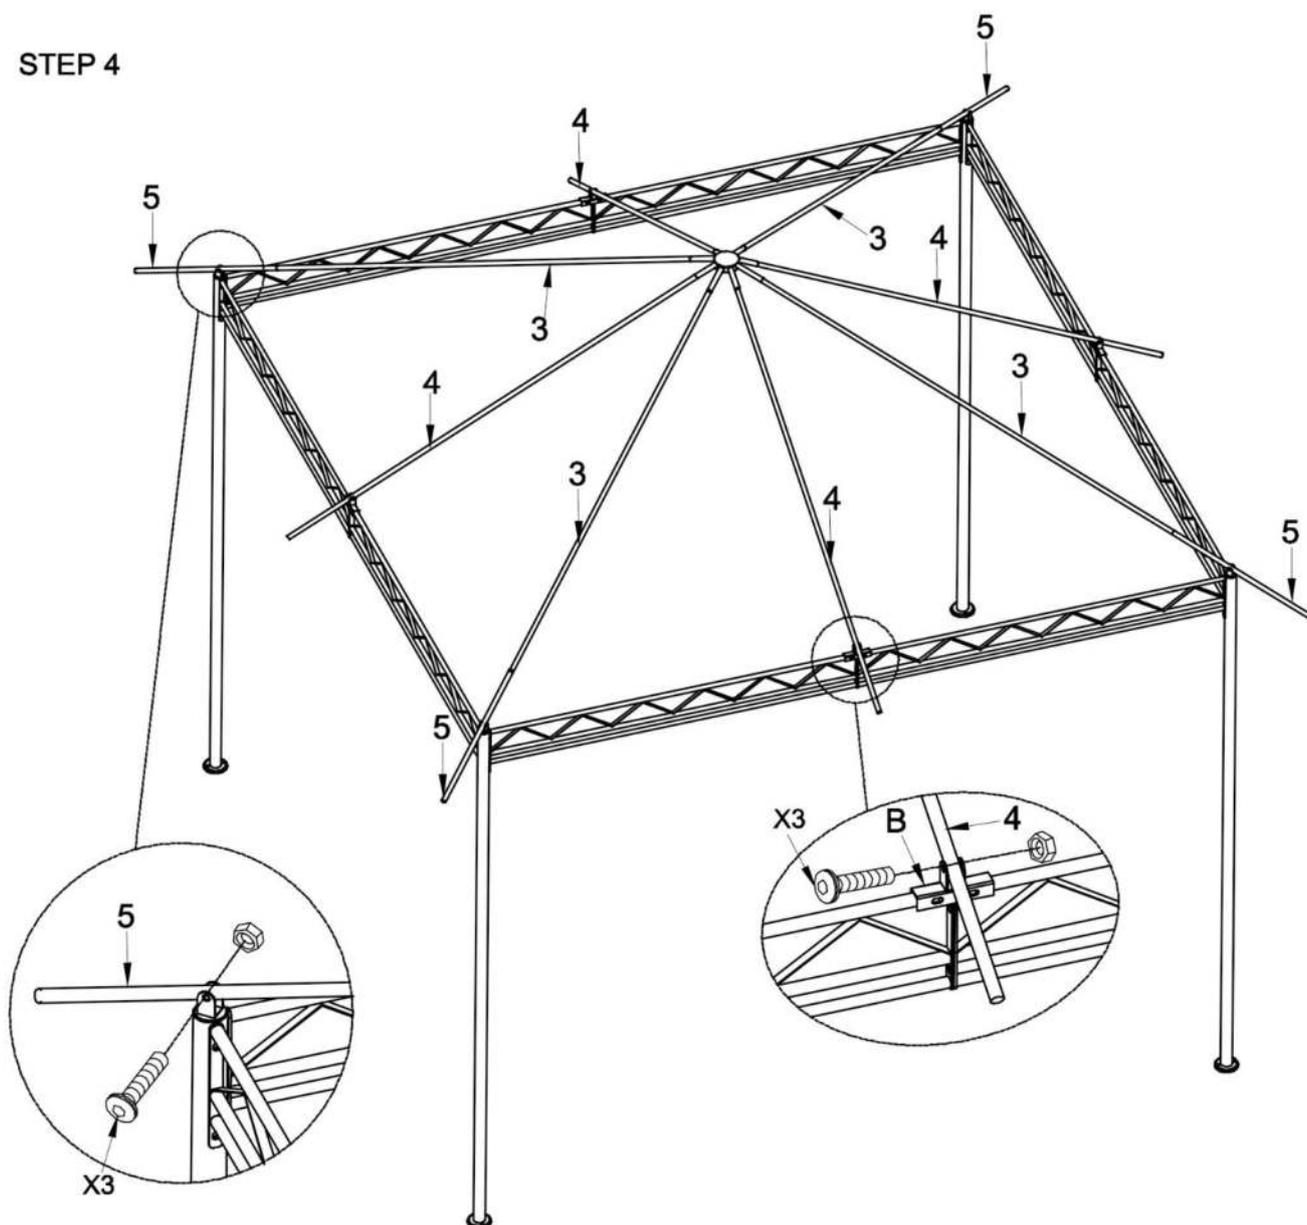
4. To attach the roof to the frame, insert all the poles through the corners and middle of the metal bar (2). Secure each pole with a screw (X3) and bolt.



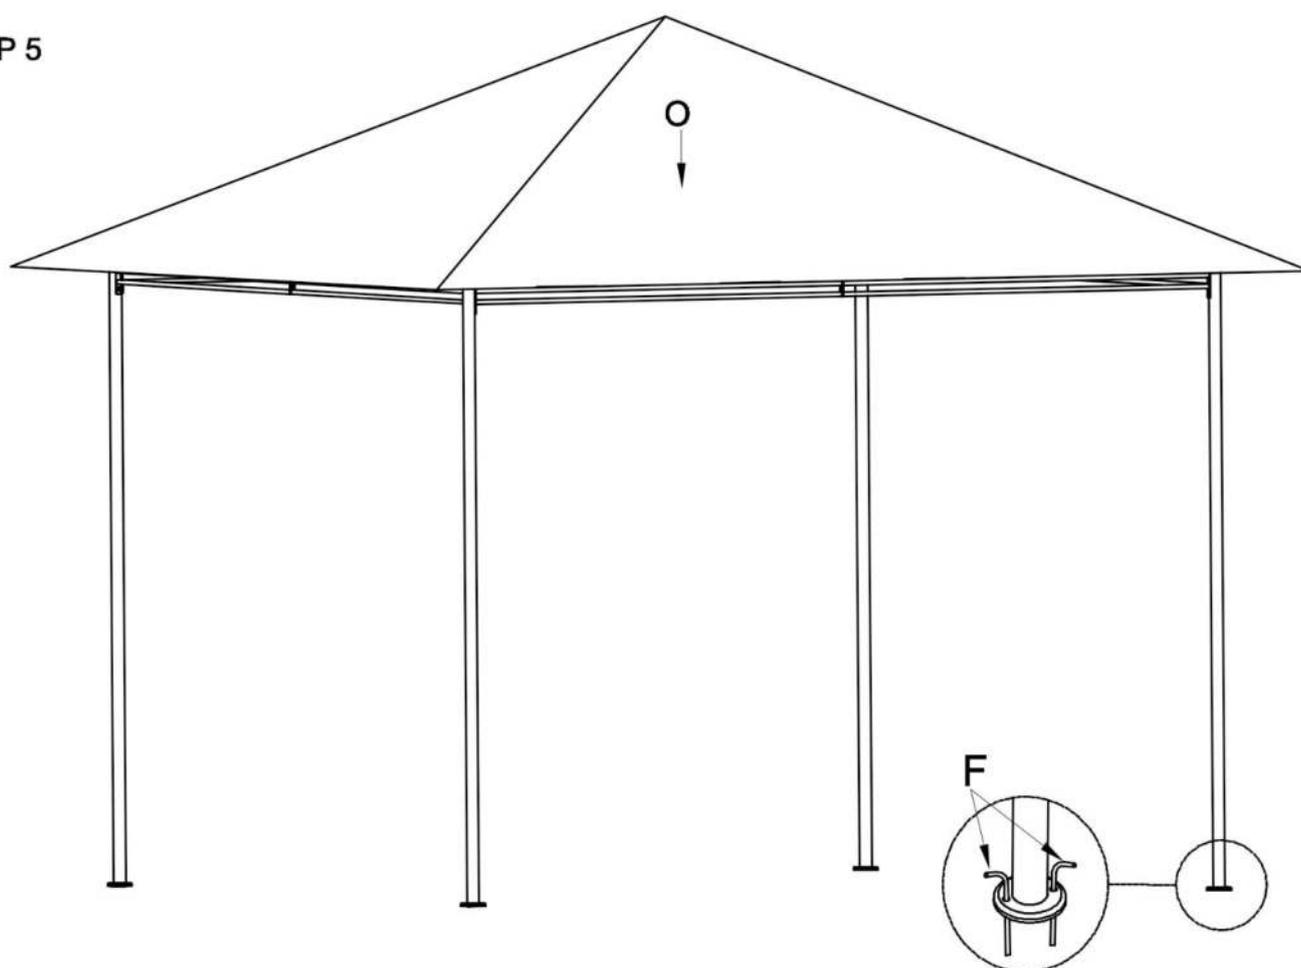5. Once the frame is secure, put the roof material (O) over the frame. Also secure the frame to the ground using pegs (F).

STEP 5

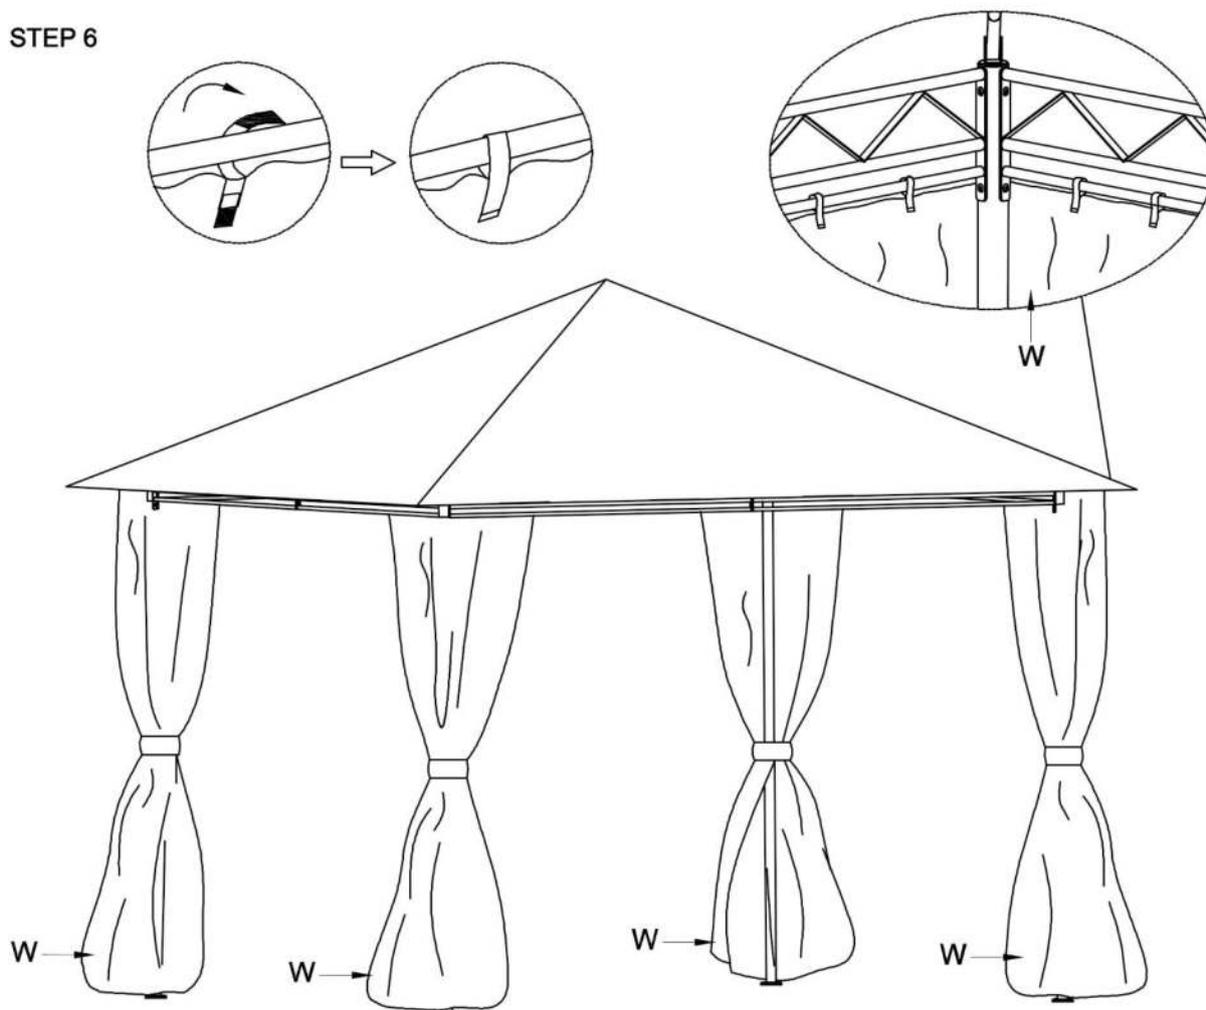6. Attach the sides of the gazebo (W), starting at the four corners and working your way to the middle (like you would with a curtain) using the sticky tabs.

STEP 6**Cleaning and maintenance**

- Spot clean when needed with a soft damp cloth.
- Allow to dry naturally, completely before packing away.
- Do not use the gazebo in adverse weather.

GUARANTEE

IMPORTANT

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.
Colours and contents may vary.

*Calls cost 13p per minute, plus your phone company's access charge