

Garden Fan Trellis Instruction Manual


G4473

General information and safety warnings

- Wear gloves whilst assembling and disassembling.
- Do not hammer the stakes and arms, do not exert too much force in case it alters the shape of the trellis.
- Make sure that the stakes are inserted approximately 20cm into the soil either directly into the prepared ground or in a large pot or tub after you have planted your choice of plant and use garden ties to attach you plant to the trellis, it is a good idea for stability to sprinkle some light gravel or pebbles around the trellis and plant on top of the soil.
- Do not use in adverse weather.
- Do not allow children to play with the trellis.
- Not suitable for commercial purposes.

Assembly

1. Unpack and dispose of all packaging correctly.
2. Assemble the trellis from the bottom, working upwards, connecting the arms onto the stakes using the clips provided. Leave approximately 22cm between each arm and leave 38cm from the base of the stakes until the first arm.
3. Adjust the trellis shape and insert it approximately 20cm into the soil, making sure that it is stable.

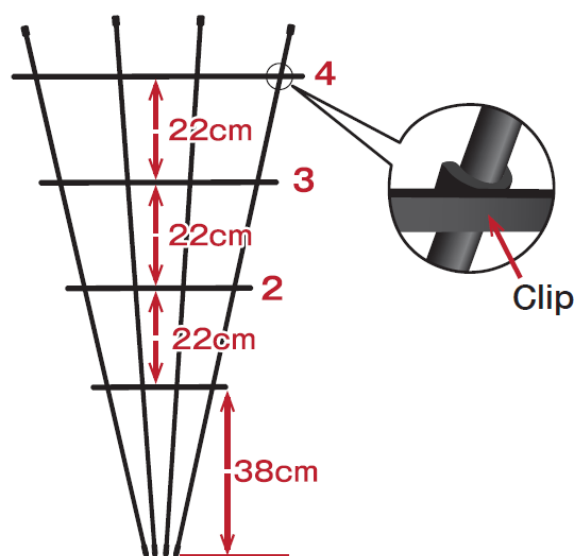



GUARANTEE

IMPORTANT

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

*Calls cost 13p per minute plus your phone company's access charge